


SPIROL®

COILED SPRING PINS FOR COSMETIC CASE HINGES

SPIROL® Series 550 Cosmetic Coiled Pins

The unique flexibility of the Series 550 Cosmetic Coiled Pin makes it the ideal hinge pin for compact cases.

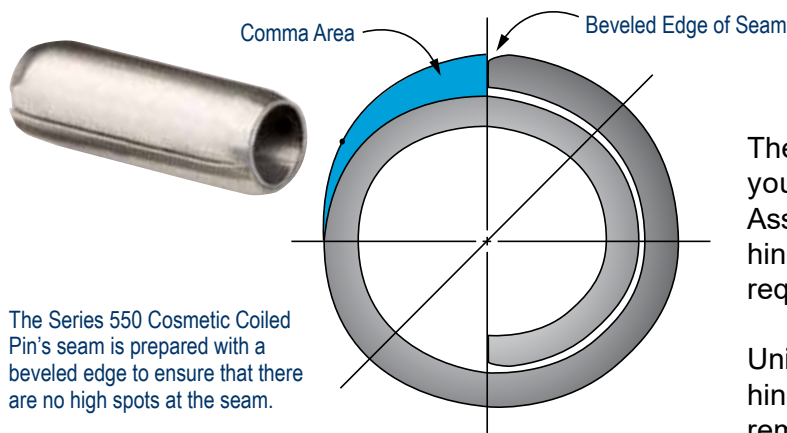


The use of a Cosmetic Coiled Pin will simplify your design and manufacturing process. Assembly is easier and less expensive, and the hinge performance will exceed swing torque requirements.

Uniform radial spring force results in controlled hinge movement and a hinge quality that remains consistent over time.

Controlled hinge movement is achieved with wider tolerances and lower molding costs than with a Solid Pin or cut wire.

Low insertion force and compression of the pin during installation minimize hinge stress and scrap.

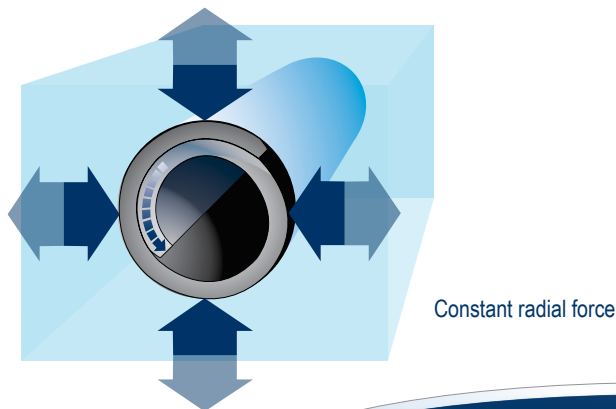


Contact **SPIROL** for design assistance:
ca.SPIROL.com/Cosmetic-Design





SERIES 550 COSMETIC COILED PINS

Specifications

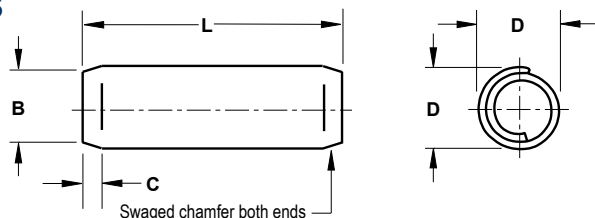

Nominal Diameter	"D" Pin Diameter		"B" Chamfer Diameter	"C" Chamfer Length	Recommended Hole Diameter		"L" Standard Lengths (Tolerance = ± 0.25)					
	Min.	Max.	Max.	(Ref.)	Min.	Max.	6	8	10	12	14	16
1.2	1.27	1.35	1.15	0.40	1.19	1.22						
1.5	1.60	1.68	1.40	0.50	1.49	1.53						

Standard Material Nickel Stainless Steel UNS 30200 / 30400, 1.4310 (18-8)

Standard Finish Plain - Oil Free

Design Guidelines

The use of a Series 550 Cosmetic Coiled Pin will simplify design as misalignment of the inner and outer holes to provide friction is no longer necessary. Intentional misalignment is difficult to control in production and induces stress in the hinge area causing cracking and pin fallout.

- Misalignment should not exceed 0.05mm.
- 60% or more pin length retained by the inner hole.
- Minimum bearing surface in either hole should exceed three times the diameter of the pin.
- The inner hole depth should be at least 0.35mm deeper than the retained pin length to prevent breaks at assembly.
- The holes in the cover and the base should be precision matched to achieve maximum friction swing torque.

Pin Installation Technology

The **Model HC, Horizontal, Dual Pin Inserter** was developed specifically for installing Series 550 Cosmetic Coiled Pins into plastic hinges.



This machine dramatically increases production efficiency with minimal operator training and effort.

SPIROL offers complimentary Application Engineering support! We will assist on new designs as well as help resolve issues, and recommend cost savings on existing designs. Let us help by visiting **Application Engineering Services** on **SPIROL.ca**.

Technical Centres

Americas **SPIROL Canada**
Windsor, Ontario
+1 519 974 3334
info-ca@spirol.com

SPIROL International Corporation
Connecticut, USA
+1 860 774 8571
info@spirol.com

SPIROL Shim Division
Ohio, USA
+1 330 920 3655
info@spirol.com

SPIROL Mexico
Apodaca, Nuevo León
+52 81 8385 4390
info-mx@spirol.com

SPIROL Brazil
Indaiatuba, São Paulo
+55 19 3936 2701
info-br@spirol.com

Europe **SPIROL United Kingdom**
Corby, Northants, England
+44 (0) 1536 444800
info-uk@spirol.com

SPIROL Ford
South Shields, Tyne & Wear, England
+44 (0) 1914 540141
contactus@ford-engineering.com

SPIROL France
Saint-Léonard
+33 (0) 3 26 36 31 42
info-fr@spirol.com

SPIROL Germany
Münich
+49 (0) 89 4 111 905 71
info-de@spirol.com

SPIROL Spain
Barcelona
+34 932 71 64 28
info-es@spirol.com

SPIROL Czech Republic
Tuchoměřice
+420 226 218 935
info-cz@spirol.com

SPIROL Poland
Warsaw
+48 510 039 345
info-pl@spirol.com

Asia Pacific **SPIROL China**
Shanghai
+86 (0) 21 5046-1451
info-cn@spirol.com

SPIROL Malaysia
Iskandar Puteri, Johor
+60 77 063 960
info-my@spirol.com

SPIROL Korea
Seoul, South Korea
+82 (0) 10 9429 1451
info-kr@spirol.com